



## Operating instructions

Last updated: 09.2016

Operator systems for garage doors

**Comfort 51, 61**

## Table of Contents

<b>1.</b>	<b>General safety instructions</b> .....	<b>3</b>
1.1	Intended use .....	3
1.2	Target group .....	3
1.3	Warranty .....	3
<b>2.</b>	<b>Supply package</b> .....	<b>4</b>
<b>3.</b>	<b>Door system</b> .....	<b>5</b>
<b>4.</b>	<b>Installation</b> .....	<b>5</b>
4.1	Preparing for installation .....	5
4.2	Installing the drive .....	6
4.3	Connection of control elements .....	9
4.4	Completing the installation .....	10
<b>5.</b>	<b>Setting in operation</b> .....	<b>10</b>
5.1	Overview of the controls .....	11
5.2	Factory settings .....	12
5.3	Express programming .....	12
5.4	Function test .....	13
5.5	Special programming .....	14
<b>6.</b>	<b>Operation</b> .....	<b>17</b>
6.1	Hand transmitter .....	18
6.2	Release mechanism .....	19
<b>7.</b>	<b>Care and cleaning</b> .....	<b>19</b>
<b>8.</b>	<b>Maintenance</b> .....	<b>19</b>
8.1	Maintenance work by the operator .....	19
8.2	Maintenance work by qualified and trained professionals .....	19
<b>9.</b>	<b>Disassembly</b> .....	<b>20</b>
<b>10.</b>	<b>Disposal</b> .....	<b>20</b>
<b>11.</b>	<b>Rectifying faults</b> .....	<b>20</b>
<b>12.</b>	<b>Appendix</b> .....	<b>22</b>
12.1	Technical Data .....	22
12.2	Declaration for the incorporation of a partly completed machine .....	22

### **DANGER!**

#### **IMPORTANT SAFETY INSTRUCTIONS:**

ATTENTION! IT IS VITALLY IMPORTANT FOR THE SAFETY OF PERSONS THAT YOU FOLLOW ALL THE INSTRUCTIONS. KEEP THESE INSTRUCTIONS IN A SAFE PLACE.

#### **IMPORTANT INSTRUCTIONS FOR SAFE INSTALLATION:**

ATTENTION! SERIOUS INJURIES CAN BE CAUSED IF THE EQUIPMENT IS NOT INSTALLED CORRECTLY – BE SURE TO FOLLOW ALL THE INSTALLATION INSTRUCTIONS.

## Regarding this document

- Original instruction manual.
- Part of the product.
- Read these instructions carefully before use and keep them in a safe place for future reference.
- Protected by copyright.
- No part of this manual may be reproduced without our prior approval.
- Subject to alterations in the interest of technical progress.
- All dimensions are given in millimetres.
- The drawings are not true to scale.

### Meaning of symbols

#### **DANGER!**

Safety notice indicating a danger that will directly result in death or severe injury.

#### **WARNING!**

Safety notice indicating a danger that could result in death or severe injury.

#### **CAUTION!**

Safety notice indicating a danger that could result in slight or moderate injuries.

#### **NOTICE**


Safety notice indicating a danger that could result in damage to property or in irreparable damage to the product.

#### **CHECK**

Reference to a check that needs to be carried out.

#### **REFERENCE**

Reference to separate documents that must be observed.

- Instruction requiring action
- List, itemisation
- Reference to other sections of this document
-  Factory settings

# 1. General safety instructions

## DANGER!

**Failure to comply with the documentation could result in life-threatening danger!**

- Be sure to follow all the safety instructions in this document.

## 1.1 Intended use

- The operator system is to be used only for opening and closing doors.
- Never use the door system to help lift persons or objects.

The following applies for the products Comfort 51, 61:

- Only approved for use in dry rooms.
- The following values must be observed:
  - maximum tensile force
  - maximum compressive force
  - maximum door size
  - maximum door weight
- "12.1 Technical Data"
- The product is intended for private use.
- The product is suitable only for counterbalanced sectional and up-and-over doors with a fall arrest system.

## 1.2 Target group

- Installation, connection, setting in operation and servicing: qualified, trained specialist personnel.
- Operation, inspection and servicing: the operator of the door system.

Requirements to be met by qualified and trained specialist staff:

- Knowledge of the general and specific safety and accident-prevention regulations.
- they have knowledge of the relevant electrical regulation,
- Training in the use and care of appropriate safety equipment.
- Adequate instruction and supervision by qualified electricians.
- The ability to recognise hazards that can be caused by electricity.
- Knowledge of the application of the following standards
  - EN 12635 ("Doors and gates - Installation and use"),
  - EN 12453 ("Safety in use of power operated doors - Requirements"),
  - EN 12445 ("Safety in use of power operated doors - Test methods"),
  - EN 13241-1 ("Industrial, commercial and garage doors and gates - Part 1: Products without fire resistance or smoke control characteristics")

Requirements to be met by the operator of the door system:

- Knowledge and safekeeping of the instruction manual.
- Safe and proper keeping of the inspection logbook.
- Knowledge of general safety and accident-prevention regulations.
- Instruction of all persons who use the door system.
- Ensure that the door system is serviced and maintained periodically by qualified and trained professionals.

Special requirements apply to the following users:

- Children aged eight and above.
  - Persons with reduced physical, sensory or mental capabilities.
  - Persons with a lack of experience and knowledge.
- These users are only authorised to operate the device.

Special requirements:

- The users must be supervised.
- The users must have been briefed on how to use the device.
- The users must understand the dangers involved in handling the device.
- Children are not allowed to play with the device.

## 1.3 Warranty

The product is manufactured in accordance with the guidelines and standards listed in the manufacturer's declaration and in the declaration of conformity. The product left the factory in perfect order with regard to safety.

In the following cases, the manufacturer will accept no liability for damage. The warranty on the product and accessory components becomes void in the event of:

- Failure to observe these operating instructions.
- Incorrect handling and use of the product for anything other than its intended purpose.
- Work being carried out by unqualified personnel.
- Changes or modifications to the product.
- The use of replacement parts that have not been approved or were not manufactured by the manufacturer.



 

 
The warranty does not cover batteries, rechargeable batteries, fuses or bulbs.

 
 
 
 

 
**Further safety instructions are given in the relevant sections of the document.**






 


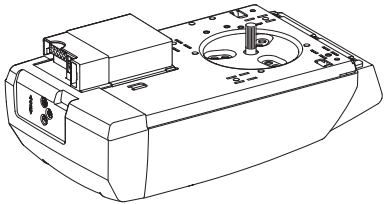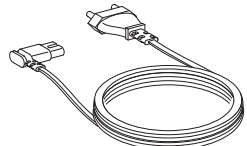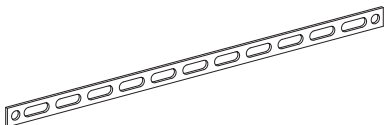
- "4. Installation"
- "5. Setting in operation"
- "6. Operation"
- "7. Care and cleaning"
- "9. Disassembly"

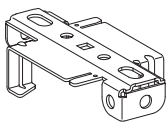
## 2. Supply package

 

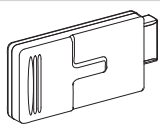
Country-specific deviations are possible.  
Fixing materials not included in scope of delivery.

Operator system		
1.		1x
2.		1x
3.		1x
4.		2x
5.		1x

Metal fittings		
6.		2x
7.		1x
8.		2x
9.		1x
10.		1x
11.		1x

Connecting elements		
12.		4x
13.		2x
14.		1x
15.		1x
16.		1x
17.		1x
18.		2x
19.		1x
20.		4x


Warning signs		
21.		1x

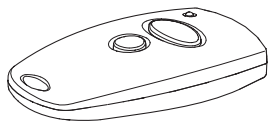Hand transmitter		
22.		1x
23.		1x
24.		1x

## 3. Door system

### Overview

3 / 1

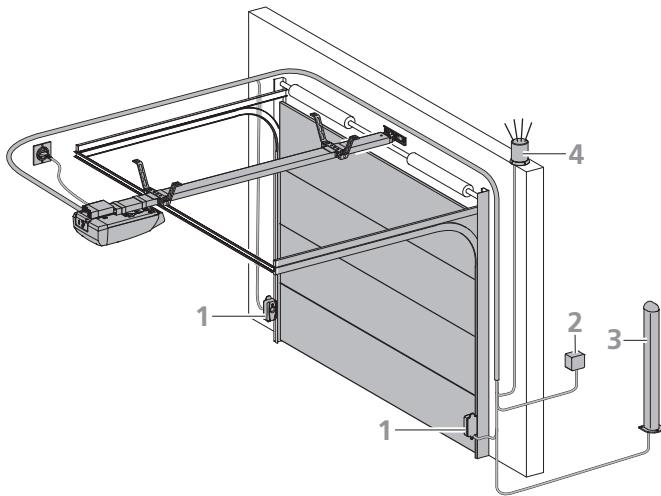

This is just an example of a door system. The details can vary according to the type of door and the associated equipment. The system shown comprises the following components:

- 1 Photocell
- 2 Key switch
- 3 Free-standing post (for code keypad, transponder etc.)
- 4 Signal light

### REFERENCE

For further information regarding accessory items, please see the manufacturer's website.

For the installation and cabling of the door sensors, control elements and safety equipment, the relevant installation instructions must be observed.

## 4. Installation

### DANGER!

#### Life-threatening danger due to electric shock!

- It is vital that you disconnect the operator system from the power supply before commencing cabling work. Take measures to ensure that the power supply remains disconnected for the duration of the work.
- Observe the local safety regulations.
- It is imperative that you lay power cables separately from control cables.  
The control voltage is 24 V DC.

### NOTICE

#### Material damage resulting from incorrect installation of the operator!

To avoid installation errors and damage to the door or operator system, the following installation instructions must be observed at all costs.

- Ensure that the door is in good mechanical condition:
  - The door remains stationary in every position.
  - The door can be moved easily.
  - The door opens and closes properly.
- When installing the operator system, the door must be in the closed position.
- Install all impulse transmitters and control equipment (such as radio code buttons e. g.) within sight of the door and at a safe distance from the door's moving parts. The installation height must be at least 1.5 metres from the ground.
- Only use fixing materials that are suitable for the foundation material in question.

### 4.1 Preparing for installation

Before commencing installation, the following works must be carried out without fail.

#### Supply package

- Check that all the parts are present.
- Check that all the necessary accessory parts for your installation situation are present (e.g. operator boom).
- Ensure that suitable fixing materials are available for your particular installation situation.

#### Garage

- Check to make sure that your garage has a suitable power connection and a mains disconnection switch.

#### Door system

- Remove any components (such as ropes, chains, brackets, etc.) from the door that are no longer needed.
- All equipment that will no longer be required after the door operator system has been installed must be taken out of service.

For garages without a second entrance:

- Fit the garage door with an emergency release mechanism so that you can gain entry to the garage if there is a malfunction.

If a release set is used:

- Check that the door catches function properly. On no account should the door catches be taken out of service.

If no release set is used:


- Remove the door catches or take them out of service.

## REFERENCE


When using and installing accessory equipment, observe the corresponding documentation.

## 4.2 Installing the drive

4.2 / 1

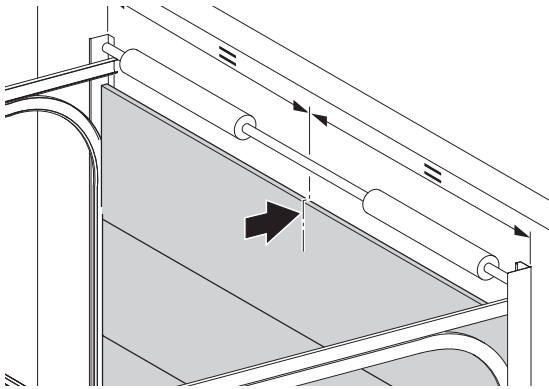


4.2 / 2

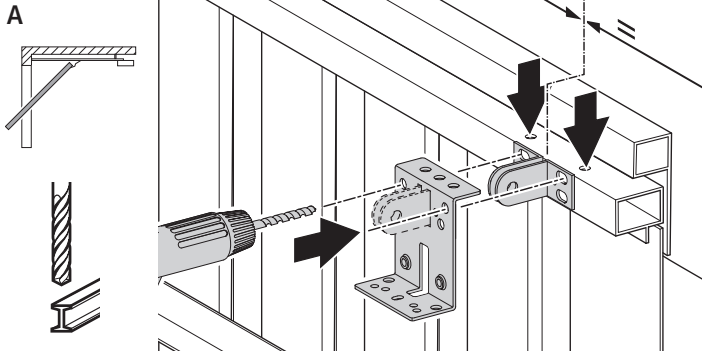


$\varnothing 5 - 5.5$



4x

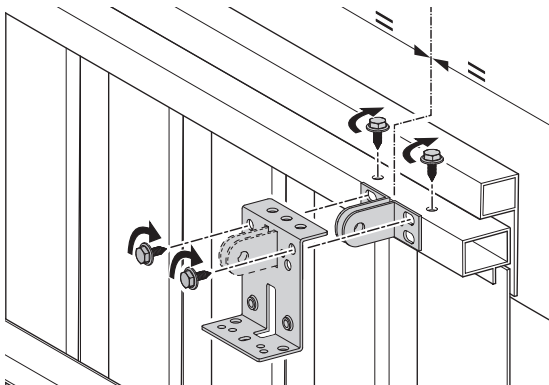


**B**

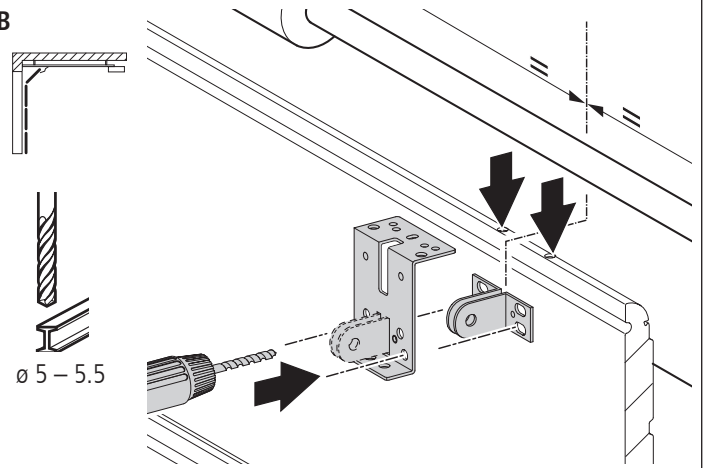


$\varnothing 5 - 5.5$



4x

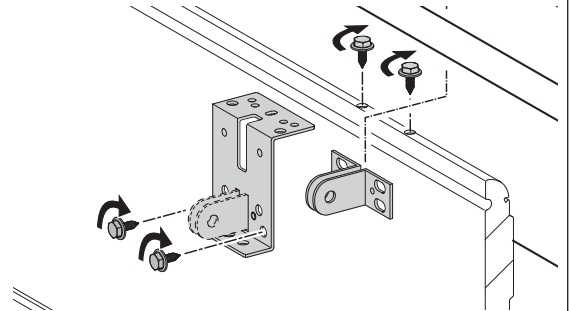

2x

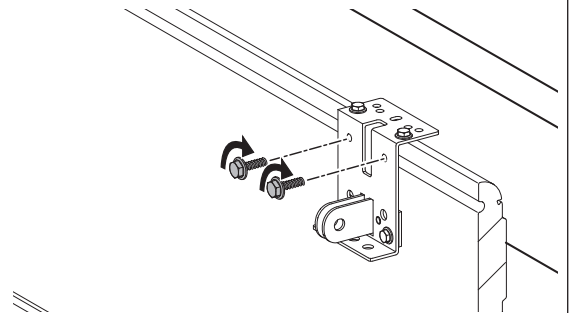

**NOTICE**

**Possibility of damaging the motor unit!**

Do not use force, as this could damage the teeth of the gears!

- Carefully fix the operator boom to the motor unit.

4.2 / 3


A



1x



4x

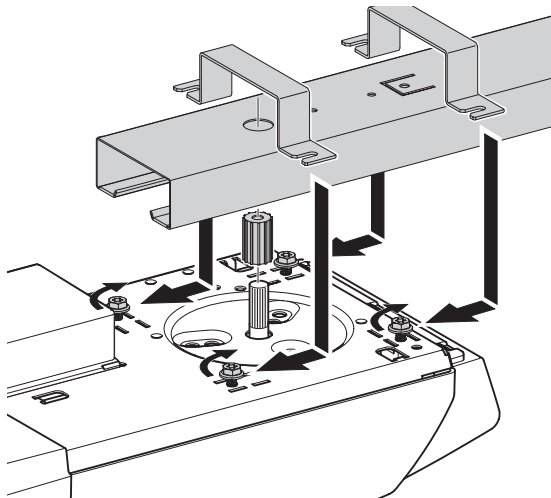


B



1x




4x

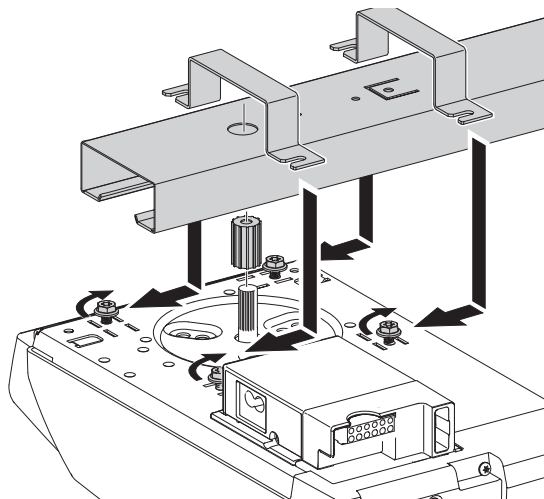

4.2 / 4



1x

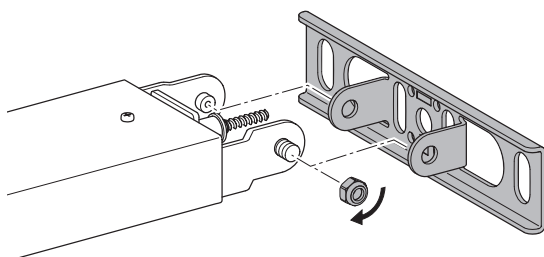


**WARNING!**

**Possibility of serious injury due to falling components!**

- Secure the operator system to prevent it from falling before it is properly fixed in place.

4.2 / 5

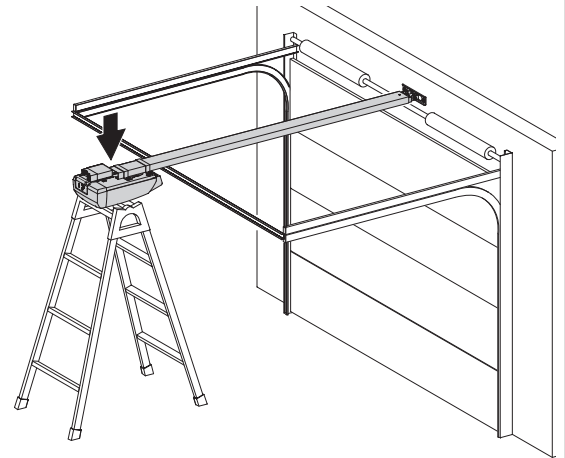

**NOTICE**

**Possibility of damaging the door leaf!**


At its highest point during opening, the top edge of the door leaf must be 10 - 50 mm below the bottom edge of the horizontal operator boom.

- Fix the lintel joining plate for the operator boom. It must be positioned centrally above the door leaf.


4.2 / 6




 
ø 10

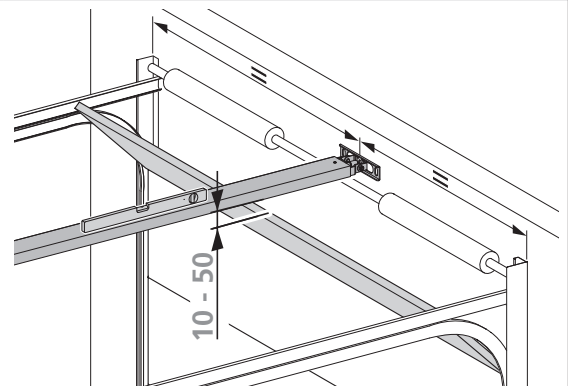


4.2 / 7

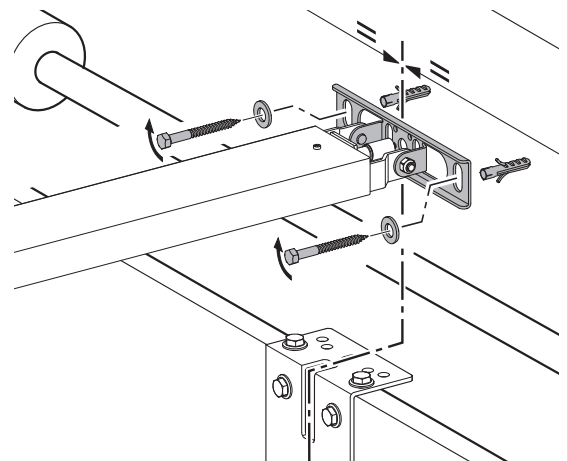


4.2 / 8

-  1x
-  1x

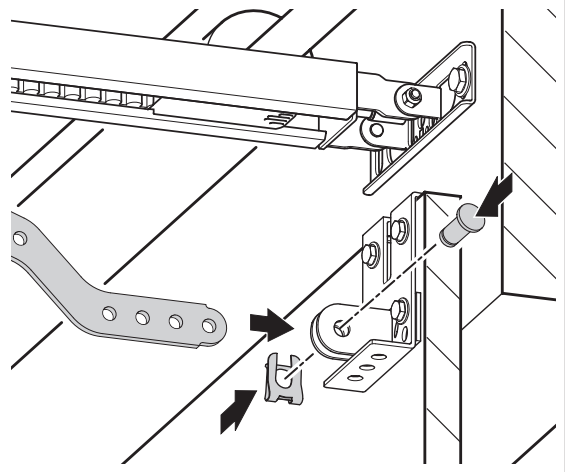


4.2 / 12

-  4x

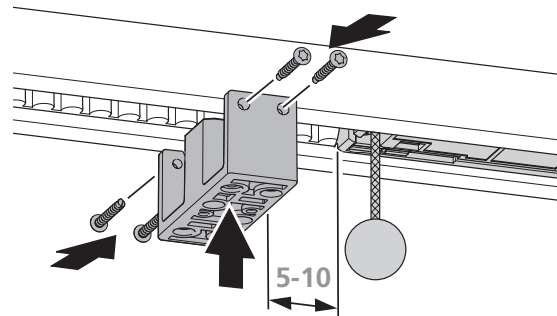


4.2 / 9

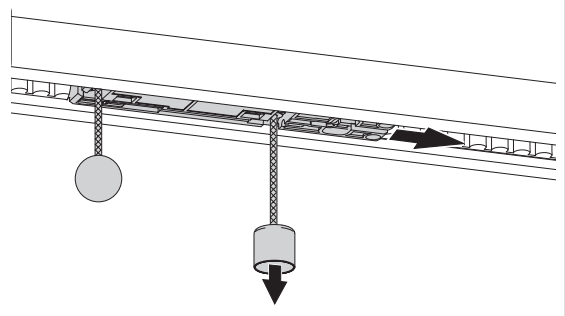


4.2 / 13

- 
- 

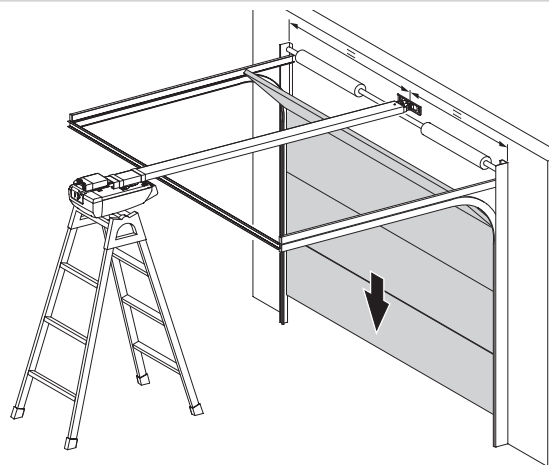


4.2 / 10

-  1x
-  2x

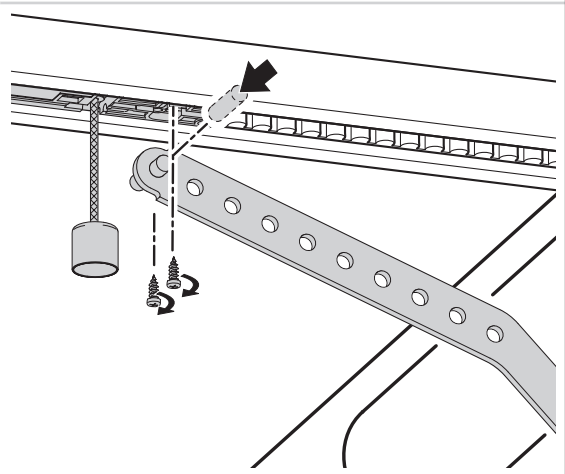


4.2 / 14

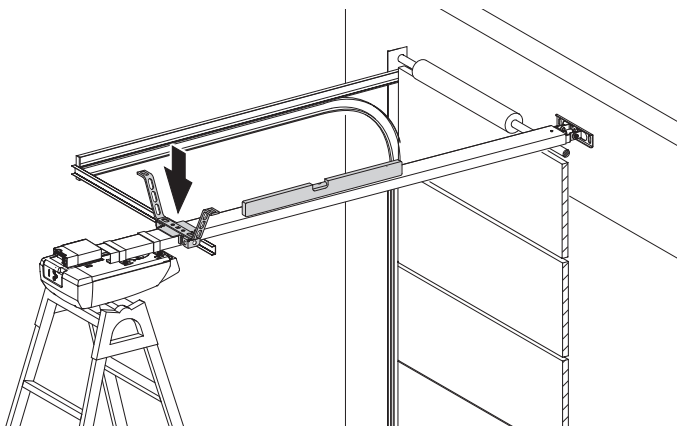


4.2 / 11

- 
- 

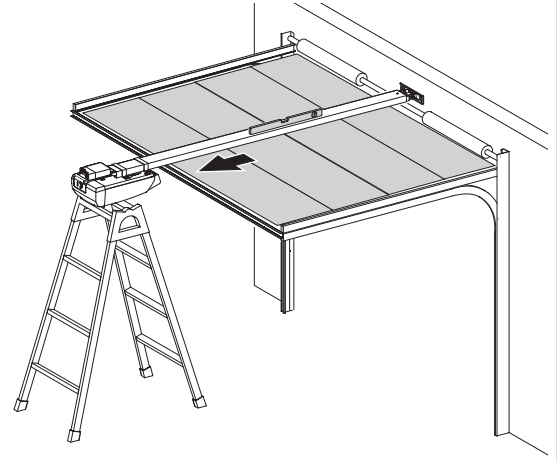


4.2 / 15

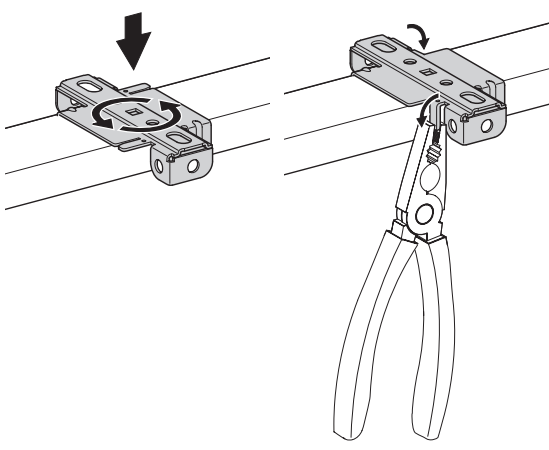




4.2 / 16

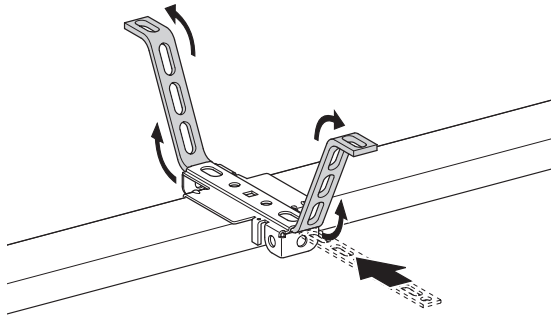

4.2 / 17

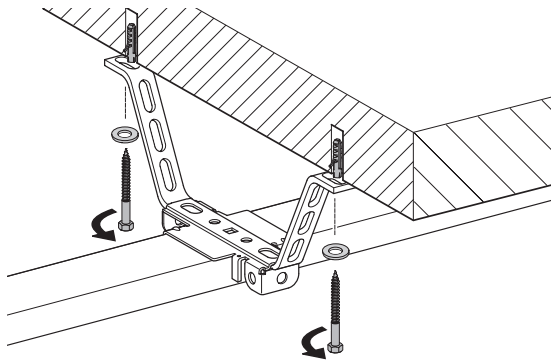

### 4.3 Connection of control elements

#### **⚠ DANGER!**

##### **Life-threatening danger due to electric shock!**

- It is vital that you disconnect the operator system from the power supply before commencing cabling work. Take measures to ensure that the power supply remains disconnected for the duration of the work.

#### **👉 NOTICE**


##### **Danger of material damage resulting from incorrect installation of the operator!**

If an external voltage is connected to terminal block XB03, the entire electronic system will be irreparably damaged.

- Connect only potential-free contacts to terminals 1, 2 and 4 (XB03).

#### 4.3.1 Overview of the control element connections


4.3.1 / 1

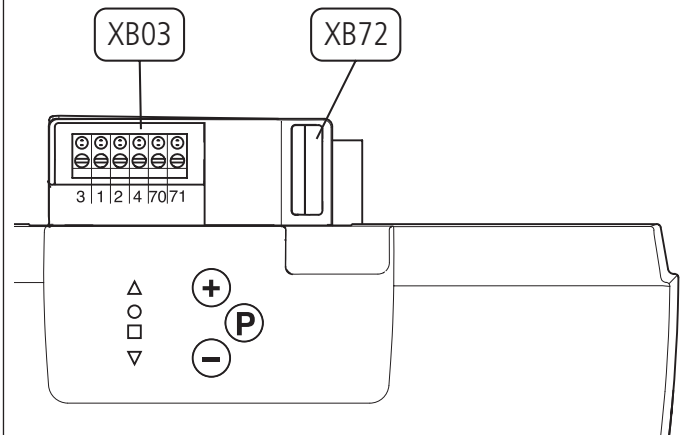

XB03	Connection for – external control elements – Photocell → "4.3.3 Terminal block XB03"
XB72	Connection for modular antenna → "4.3.2 Terminal block XB72"


#### 4.3.2 Terminal block XB72

4.3.2 / 1

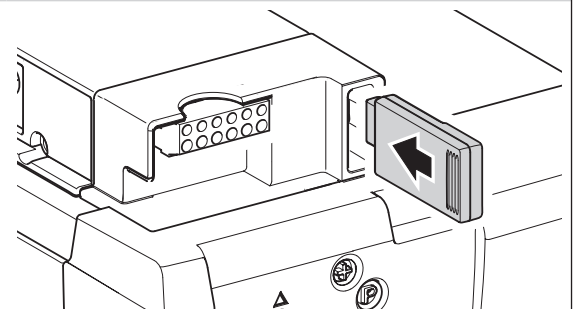


### 4.3.3 Terminal block XB03

4.3.3 / 1

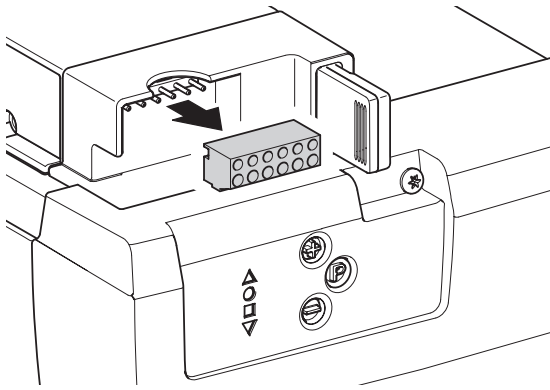


4.3.3 / 2

M11E021

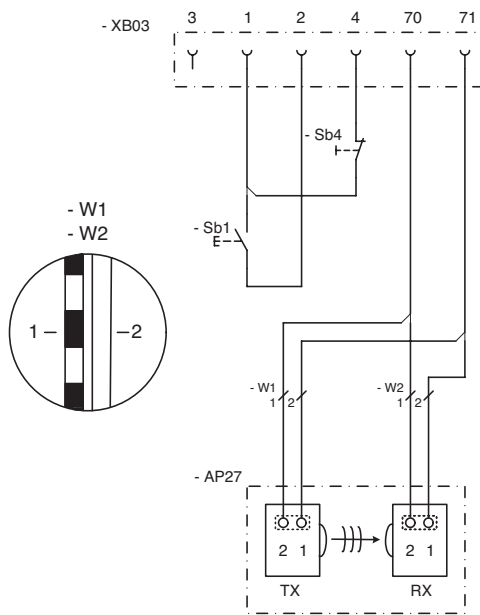


1	GROUND
2	Impulse
3	24 V DC
4	Hold circuit, active after a reset
70	GROUND
71	Photocell
AP27	Photocell
RX	Photocell receiver
TX	Photocell transmitter
Sb1	Impulse button
Sb4	Normally closed contact for hold circuit

4.3.3 / 3

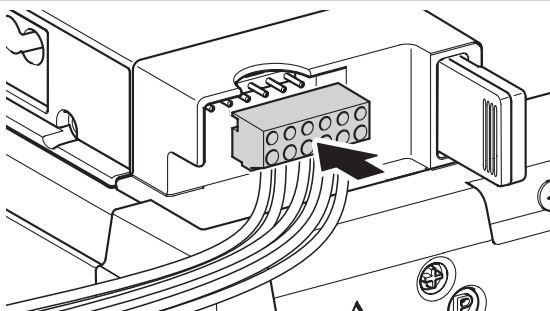

### 4.4 Completing the installation

4.4 / 1

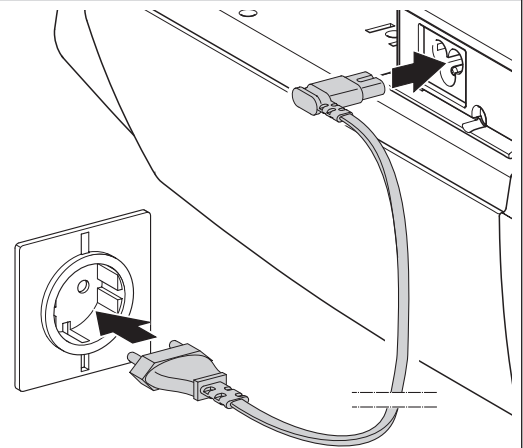

- Take the warning signs regarding trapping hazards and affix them permanently at noticeable locations.
- After installation is complete, ensure that no door parts extend onto the public footpath or the street.

### 5. Setting in operation

Before putting into operation for the first time and whenever necessary, but at least once a year, power-operated windows, doors and gates must be inspected by a qualified and trained professional with a force tester designed for this purpose (written inspection records must be kept).

After setting the system in operation, the operator of the door system, or the operator's representatives, must be instructed in the operation of the system.





#### **! WARNING!**

##### **Danger of injury due to uncontrolled movement of the door!**






- Ensure that children can not play with the door controls or the hand transmitter.
- Before setting the door in motion, make sure that no persons or objects are within the danger zone of the door.
- Before going through the door opening, make sure that the door is in the OPEN position.
- Check all the existing emergency command devices.
- Pay attention to potential crushing and shearing zones in the door system.
- Never touch a running door, the guide rail or any moving parts.
- The regulations of DIN EN 13241-1 ("Doors and gates - Product Standard") must be observed.

## 5.1 Overview of the controls





### Control elements

	LED display
	Drive the door in the OPEN direction, increase the value
	Drive the door in the CLOSE direction, decrease the value
	Start programming, confirm and save values
















 

















































### Legend

	LED off
	LED on
	LED flashes slowly
	LED flashes quickly
	LED flashes rhythmically

### Display Function / Element

	Door position: OPEN
	Remote control
	Ready for operation
	Door position: CLOSED

### Displaying values (example showing menus)

			
	1		9
			
			
			
	2		10
			
			
			
	3		11
			
			
			
	4		12
			
			
			
			
	5		13
			
			
			
			
	6		14
			
			
			
			
	7		15
			
			
	8		
			
			

Values can be displayed as follows:

- slow flashing (menus)
- quick flashing (parameters)
- rhythmic flashing (fault number)

## 5.2 Factory settings

Using the reset procedure, the operator parameters can be restored to their original factory settings.

→ "Menu 11 – RESET"

## 5.3 Express programming

To set the operator system properly in service and after every reset, the express programming procedure must be carried out.

Requirements:

- The door must be in the CLOSED position.
- The carriage must be coupled up.

When in programming mode, the controls will revert automatically to operating mode if a period of 120 seconds passes without any buttons being pressed.

A corresponding fault number will be displayed.

→ "11. Rectifying faults"

- Carry out the express programming procedure.




### CHECK

A function test must be carried out after express programming.



→ "5.4 Function test"

## Express programming




### 1. Programming the "OPEN" door position

		△ ○ ■ ▼
	The control system is in operating mode.	△ ○ ■ ▼
	P > 3 sec. < 10 sec.: Start express programming.	☀ ○ ■ ▽
	Drive the door to the OPEN position.	☀ ○ ■ ▽
	Save the OPEN position.	△ ○ ■ ☀

### 2. Programming the "CLOSED" door position



 

		△ ○ ■ ☀
	Drive the door to the CLOSED position.	△ ○ ■ ☀
	Save the CLOSED position.	△ ☀ ■ ▽

### 3. Programming the remote control Multi-Bit

	Press the hand transmitter button.	△ ☀ ■ ▽
	Release the hand transmitter button.	△ ☀ ■ ▽
	Save the remote control setting. End express programming.	△ ○ ■ ▼
	The control system is in operating mode.	△ ○ ■ ▼

## Express programming

### 3. Programming the remote control bi-linked

	Press the programming button on the hand transmitter.	
	Press the hand transmitter button.	△ ☀ ■ ▽
	Release the hand transmitter button.	△ ☀ ■ ▽
	Save the remote control setting. End express programming.	△ ○ ■ ▼
	The control system is in operating mode.	△ ○ ■ ▼

## 5.4 Function test






### 5.4.1 Programming run for setting the driving power

The maximum required driving power is determined automatically by the opener system during the first six runs after the door positions have been set.

- Drive the opener system (with the door coupled up) three times from the OPEN door position to the CLOSED position and back again, without interruption.

The driving power must be inspected by qualified and trained professionals with a force tester designed for this purpose.

#### Check the driving power

1.	The control system is in operating mode.	△ ○ ■ ▼
2.	 The door should open and move to the saved "OPEN" door position.	☀ ○ ■ ▽
3.	 The door should close and move to the saved "CLOSED" door position.	△ ○ ■ ☀
4.	 The door operator should move the door in the OPEN or CLOSE direction.	△ ☀ ■ ☀
5.	 The operator system should stop.	△ ☀ ■ ▽
6.	 The operator system should run in the opposite direction.	△ ☀ ■ ☀

## 5.4.2 Checking the automatic cut-out

### WARNING!

#### **Danger of injury due to incorrectly programmed values for the door driving power!**

- Check the automatic cut-out function in the OPEN and CLOSE directions.

#### **Automatic cut-out in the OPEN direction**

- During travel, apply a load of 20 kg to the door at the mid point of the bottom edge of the door:  
The door should stop immediately.

#### **Automatic cut-out in the CLOSE direction**

- Place an object, 50 mm in height, on the floor.
- Drive the door towards the obstacle:  
The operator system should stop and reverse when it touches the obstacle.

The settings for the driving power in the OPEN and CLOSE directions remain saved even if the mains power supply is interrupted.

The parameters are returned to the factory settings only after a reset.

→ "Menu 11 - RESET"

## 5.4.3 Checking the photocell

### **Photocell**

- Check all the photocells individually by triggering them.
- Check all the photocells just before the door reaches the CLOSED position.

### **Special points regarding door-frame photocells**

- A door-frame photocell must function above the position at which it is installed. Below the installation position, the function of the photocell is suppressed by the control unit.
- If several photocells are connected, all the photocells function in the same way as a door-frame photocell, if present.

## 5.5 Special programming

### DANGER!

#### **Danger of injury due to incorrect settings for the door driving power!**

The DIN EN 13241-1 and EN 12453 provide limits for the protection of people. These can be exceeded by selecting the wrong parameters. It is therefore essential to test the force generated by the door.

- Check the programmed parameter values.  
→ "5.4.2 Checking the automatic cut-out"
- Have the driving force tested by qualified and trained professionals with a force tester designed for this purpose.

### NOTICE

#### **Material damage resulting from incorrect programming of the door operator.**

After a reset, all the parameters are returned to the factory settings. Safety elements that are operational and are connected to the system will be recognised anew after a reset.

To ensure that the controls functions properly:

- Reprogram all the required functions.
- Reprogram the remote control.
- Drive the operator system once to the OPEN position and then the CLOSED position.

If a photocell is connected, it will be automatically detected by the control system as soon as the power supply is connected.

The photocell can be reprogrammed later.

Photocells that are not required must be disconnected before the power supply is connected; otherwise they will be recognised by the controls.











→ "4.3.3 Terminal block XB03"

### CHECK

A function test must be carried out after changes have been made in programming mode.

→ "5.4 Function test"

### 5.5.1 Programming the special functions

Programming procedure		
1.	The control system is in operating mode.	△ ○ ■ ▽
2.	 P > 10 sec.: Start programming the extended operator functions. The first menu is displayed.	△ ○ □ ✱
3.	  Select the menu required (example Menu 5).	△ ☀ □ ✱
4.	 Confirm the menu required. Display the programmed parameter value (example 4).	△ ☀ □ ▽
5.	  Change the parameter value (example 5).	△ ☀ □ ✱
6.	 Save the parameter value. The control unit changes to the menu display.	△ ☀ □ ✱
7.	  Select the next menu you require. Continue programming.	△ ☀ ☀ ▽
	<b>or</b>	
	 P > 5 sec.: Finish programming. All the altered parameters are saved.	△ ○ ■ ▽
	The control system is in operating mode.	△ ○ ■ ▽

### 5.5.2 Overview of the special functions

Menu		
1	△ ○ □ ✱	Automatic closing timer
2	△ ○ ☀ ▽	Intermediate OPEN position
3	△ ○ ☀ ✱	Remote – Intermediate OPEN position
4	△ ☀ □ ▽	Remote – Operator lighting
5	△ ☀ □ ✱	Automatic cut-out in the OPEN direction
6	△ ☀ ☀ ▽	Automatic cut-out in the CLOSE direction
7	△ ☀ ☀ ✱	OPEN speed
8	✱ ○ □ ▽	CLOSE speed
9	✱ ○ □ ✱	Photocell
10	✱ ○ ☀ ▽	Stress relief in the CLOSED door position (back jump)
11	✱ ○ ☀ ✱	RESET


### 5.5.3 Contents of the special functions

#### Menu description

##### Menu 1 – Automatic closing timer

(Access to this menu is for qualified and trained professionals only).

△ The operator lighting flashes during the warning period and when the door is moving.

○	1	 Deactivated	
□	2	Door open duration 15 / Warning time 5	The open duration can only be increased via an impulse signal (button or hand transmitter).
☀	3	Door open duration 30 / Warning time 5	
	4	Door open duration 60 / Warning time 8	
	5	Door open duration 15 / Warning time 5	The door open duration ends after the photocell has been triggered.
	6	Door open duration 30 / Warning time 5	
	7	Door open duration 60 / Warning time 8	
	8	Door open duration infinite / Warning time 3	Door closes after the photocell has been triggered / Closing prevention.

##### Menu 2 – Intermediate OPEN position

△ Adjust the setting using the + (OPEN) and – (CLOSE) buttons.  
 ○ The closing function with automatic closing is possible.  
 ☀ Only the intermediate position that was programmed last can be used.  
 ▽

##### Menu 3 – Remote – Intermediate OPEN position

△  
 ○ LED 1 flashes -> Press the hand transmitter button ->  
 ☀ LED 3 also flashes > The function has been programmed.  
 ☀


##### Menu 4 – Remote – Operator lighting

△  
 ☀ LED 1 flashes -> Press the hand transmitter button ->  
 □ LED 3 also flashes > The function has been programmed.  
 ▽

#### Menu description


##### Menu 5 – Automatic cut-out in the OPEN direction

(Access to this menu is for qualified and trained professionals only).

△ Sensitivity on a scale of 1 to 15  
 ☀ (the lower the number, the more sensitive the automatic cut-out).  
 □  
 ☀  11


##### Menu 6 – Automatic cut-out in the CLOSE direction

(Access to this menu is for qualified and trained professionals only).

△ Sensitivity on a scale of 1 to 15  
 ☀ (the lower the number, the more sensitive the automatic cut-out).  
 ☀  
 ▽  7

##### Menu 7 – OPEN speed

(Access to this menu is for qualified and trained professionals only).

△  
 ☀ On a scale of 6 to 15.  
 ☀  15  
 ☀

##### Menu 8 – CLOSE speed

(Access to this menu is for qualified and trained professionals only).

☀  
 ○ On a scale of 6 to 15.  
 □  13  
 ▽




## Menu description

### Menu 9 – Photocell


(Access to this menu is for qualified and trained professionals only).

- ☀  
○  
□  
☀ Door reverses a short distance:  
The operator system moves the door slightly in the opposite direction in order to release an obstacle.
- ☀ Door reverses over a long distance:  
The operator system moves the door all the way to the OPEN position.


1	 Operation without photocell
2	2-wire photocell (terminal block XB03 - terminal 70/71), Door movement in CLOSE direction: door reverses over a long distance
3	External photocell (terminal block XB03 - terminal 70/71), Door movement in CLOSE direction: door reverses over a long distance

### Menu 10 – Stress relief in the CLOSED door position (back jump)

(Access to this menu is for qualified and trained professionals only).

- ☀  
○  
☀  
▽  
1  Back jump not activated
- 2 Back jump activated – short
- 3 Back jump activated – medium

### Menu 11 – RESET

- ☀  
○  
☀  
☀  
1  No reset
- 2 Reset the controls

## 6. Operation

### WARNING!

#### **Danger of injury due to uncontrolled operation of the door!**

- Operate the controls or the hand transmitter only when there are no persons or objects in the path of the door.
- Ensure that the controls and the hand transmitter are never used by children or unauthorised persons.
- Ensure that the hand transmitter cannot be operated by accident (in a trouser pocket, for example).

### NOTICE

#### **Danger of damage to property due to uncontrolled movement of the door!**

 



When the door moves, the hand chain can get caught and this could result in damage (in the case of ceiling-mounted supports for example).

- Ensure that there are no obstacles blocking the path of the door or the hand chain.

 

 

 
## 6.1 Hand transmitter

The operator works with the supplied hand transmitter on the basis of a pulse sequence control system.

### Operating the door using the hand transmitter

 
 


 
1.		The control system is in operating mode.	△ ○ ■ ▽
2.		1. Impulse: The door opens and moves in the OPEN direction	△ ☀ ■ ✱
3.		2. Impulse. The operator system stops.	△ ☀ ■ ▽
4.		3. Impulse: The door moves in the opposite direction (CLOSE direction).	△ ☀ ■ ✱

### Transmitting the code (only multi-bit)

1.		Connect the hand transmitter to the transmission plug.
2.		Press the button on the master transmitter. Keep the button pressed. The LED lights up.
3.		Press the button on the hand transmitter which is to be given a new code. The LED flashes.
4.		The LED lights up. The coding procedure is completed.
5.		Remove the transmission plug.


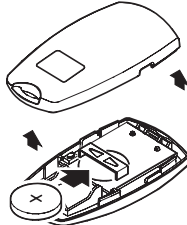
For multi-button transmitters, each button can be programmed with a different function.

### Changing the code (only multi-bit)

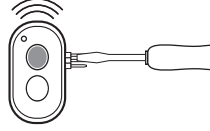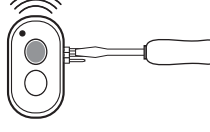1.		Plug the transmission plug into the hand transmitter.
2.		Short-circuit one of the two outer pins with the centre pin adjacent to it (e.g. using a screw driver).
3.		Press the desired button on the hand transmitter. The LED flashes.
4.		The LED lights up. The coding procedure is completed.
5.		Remove the transmission plug.

After the hand transmitter has been re-coded, the operator system must also be re-programmed to respond to the new code.  
For multi-channel transmitters, the programming process must be carried out for each button separately.

### Changing the battery

1.		Open the hand transmitter.
2.		Replace the battery.

### ➡ REFERENCE

For more information on the additional functions of the bi-linked hand transmitter supplied, please refer to the relevant documentation.

## 6.2 Release mechanism

### CAUTION!

#### **Danger of injury due to uncontrolled movement of the door!**

When the release mechanism is operated, uncontrolled door movements could occur:

- If the door springs are weak or broken.
- If the door is not balanced.
- When the mechanism is released, only move the door carefully and at a moderate speed!


### NOTICE

#### **Danger of damage to property due to uncontrolled movement of the door!**


When opening the door manually, the carriage could collide with the carriage stop.

- When the mechanism is released, only move the door carefully and at a moderate speed!

6.2 / 1

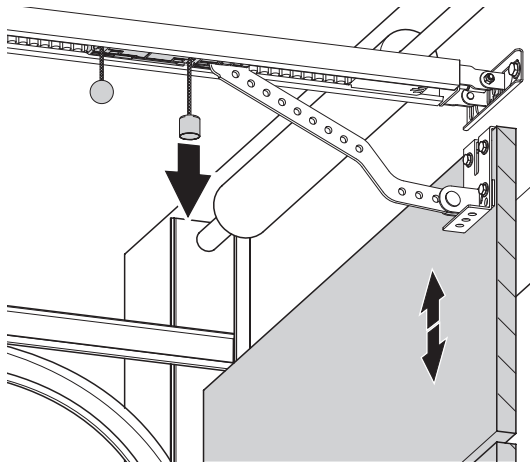

6.2 / 2

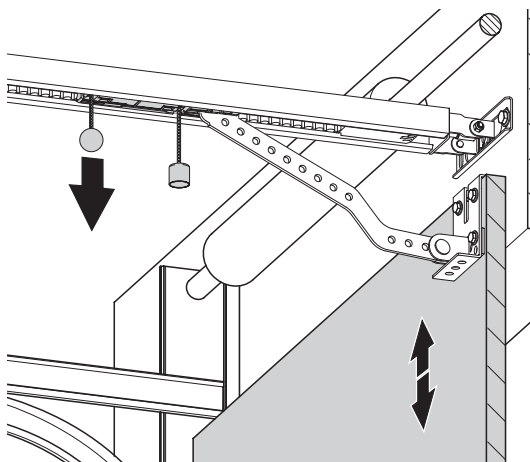

## 7. Care and cleaning

### DANGER!

#### **Life-threatening danger due to electric shock!**

- It is vital that you disconnect the operator system from the power supply before cleaning. Take measures to ensure that the power supply remains disconnected for the duration of the cleaning operation.

### NOTICE

#### **Damage resulting from incorrect operation!**

When cleaning the operator system, never use: direct water jets, high pressure cleaners, acids or alkaline solutions.

- Clean the outside of the housing using a damp, soft cloth that does not shed fibres.

If particularly dirty, the housing can be cleaned using a mild detergent.

## 8. Maintenance

### 8.1 Maintenance work by the operator

Damage or wear to a door system must only be rectified by qualified and trained professionals.

To ensure fault-free operation, the door system must be inspected regularly and, if necessary, be repaired. Before starting work on the door system, the operator system must always be disconnected from the power supply.

- Check once a month that the operator system reverses when the door touches an obstacle. To check this, place an obstacle, 50 mm in height, in the path of the door in the direction of travel.
- Check the settings of the automatic cut-out in the OPEN and CLOSE directions.
- "5.4.2 Checking the automatic cut-out"
- Check all the moving parts of the door system and door operator system.
- Check the door system for signs of damage or wear and tear.
- Move the door manually to check that the door travels easily and smoothly.
- Check all power supply cables for signs of damage. For safety reasons, if the power supply cable is damaged it must be replaced by the manufacturer or the manufacturer's customer service department, or by a similarly qualified person.

### 8.2 Maintenance work by qualified and trained professionals

Power-operated windows, doors and gates must be inspected by qualified and trained professionals whenever necessary, but at least once a year (written inspection records must be kept).

- Test the driving power with a force tester designed for this purpose.
- Replace any damaged or worn parts.

## 9. Disassembly

### DANGER!

#### Life-threatening danger due to electric shock!

- It is vital that you disconnect the operator system from the power supply before disassembly. Take measures to ensure that the power supply remains disconnected during disassembly.


### WARNING!

#### Possibility of serious injury due to falling components!

- Before disassembling the operator system, secure it to prevent it from falling.
- Observe all the applicable health and safety regulations.

The system must be dismantled by qualified and trained professionals, following the installation instructions in reverse order.

## 10. Disposal

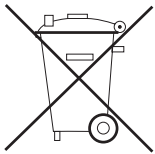

Do not dispose of old equipment or batteries with the normal household waste!

- Dispose of old devices at a waste collection centre for electronic waste or via your specialist dealer.
- Dispose of old batteries in a battery recycling container or via a specialist dealer.
- Dispose of the packaging material in the special waste collection containers for paper, cardboard and plastic.

## 11. Rectifying faults

### Faults with no fault messages

#### LED display does not light up.

No supply voltage present.

- Check that the mains voltage supply is operational.
- Check the electrical connection.

The thermal overload protection in the mains transformer has been triggered.

- Allow the transformer to cool down.

Control unit defective.

- Have the operator system checked.

#### No reaction after impulse signal.

Connection terminals for "impulse" button are bridged, e.g. due to flat terminals or a short circuit in the wiring.

- If key switches or interior push buttons are connected, try disconnecting them from the control unit: remove cables from the XB03 terminal block, insert the shorting plug and search for the wiring fault.

→ "4.3.3 Terminal block XB03"

#### No reaction after an impulse signal has been transmitted by the hand transmitter.

Modular antenna is not plugged in.

- Connect the modular antenna to the control unit.

→ "4.4 Completing the installation"

Hand transmitter code does not correspond to the receiver code.

- Activate the hand transmitter anew.

→ "5.2 Factory settings"

The battery in the hand transmitter is empty.

- Insert new battery.

→ "6.1 Hand transmitter"

The hand transmitter, control electronics or modular antenna are defective.

- Have all 3 components checked.

#### The operator system reverses when the door-frame photocell is triggered.

The system was not programmed correctly.

- Carry out a RESET.


→ "Menu 11 - RESET"

- Carry out the express programming procedure again.

→ "5.2 Factory settings"

## Faults with fault messages

The system indicates recognised faults by showing a fault number (example: fault number 7). The control system switches to reporting mode. In operating mode, the last fault number can be shown by pressing the P button.

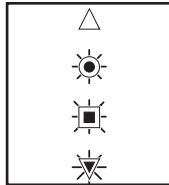

### Fault number 1

- △ Wire jumper removed but stop button not connected.
  - Plug in stop button or insert shorting plug.
  - "4.3 Connection of control elements"
- Operator system released or closed circuit interrupted.
  - Engage the operator system.

### Fault number 2

- △ The door does not move easily or smoothly or is obstructed.
  - Check the door movement and take measures to ensure that the door moves freely and smoothly.
- Automatic cut-out setting is too sensitive.
  - Have the automatic cut-out function checked by a specialist dealer.
  - "Menu 5 - Automatic cut-out in the OPEN direction"
  - "Menu 6 - Automatic cut-out in the CLOSE direction"

### Fault number 3

- △ The current sensor for the automatic cut-out is defective.
  - Have the motor unit checked.

### Fault number 4

- △ The operator system is overloaded when the driving power is set to 16 (maximum).
  - Have the external power supply checked.

### Fault number 5

- △ Photocell triggered or defective.
  - Remove obstacle or have the photocell checked.
- Photocell programmed but not connected.
  - Deactivate or connect the photocell.

### Fault number 6

- △ The door does not move easily or smoothly or is obstructed.
  - Check the door movement and take measures to ensure that the door moves freely and smoothly.
- CLOSED door position setting faulty.
  - Check OPEN and CLOSED door positions and, if necessary, readjust them.
  - Check door.

## Faults with fault messages

### Fault number 7

- △ Programming mode will end automatically if 120 seconds elapse without a button being pressed.
  - Start the programming procedure again.

### Fault number 8

- △ Rise in temperature due to overheating.
  - Allow the motor unit to cool down.

### Fault number 9

- △ Rotational speed sensor impulse not present, operator system is obstructed.
  - Have the operator system checked.

### Fault number 10

- △ The door does not move easily or is obstructed.
  - Take measures to ensure that the door moves freely and smoothly.
- The maximum driving power has been set too low.
  - Have the maximum driving force tested by qualified and trained professionals with the aid of a force tester designed for this purpose.

### Fault number 11

- △ Excess travel stop.
  - Have the operator system checked.

### Fault number 12

- △ The push-open security device has been triggered, possibly by attempted break-in.
  - Check the door for damage.

## 12. Appendix

### 12.1 Technical Data

#### Electrical data

Rated voltage, regional deviations are possible	V	230 / 260
Rated frequency	Hz	50 / 60
Current input	A	1.1
Power consumption in operation*	kW	0.25
Power consumption in standby*	W	approx. 4
Duty cycle	min	short-term 2
Control voltage	V DC	24
Protection category of motor unit		IP 20
Protection class		II


\* without any additional equipment connected

#### Mechanical data

Max. push and pull force		
– Comfort 51	N	550
– Comfort 61	N	650
Maximum travel speed	mm/s	160
Opening time, dependent on door type	s	approx. 14

#### Environmental data

Dimensions of the operator system

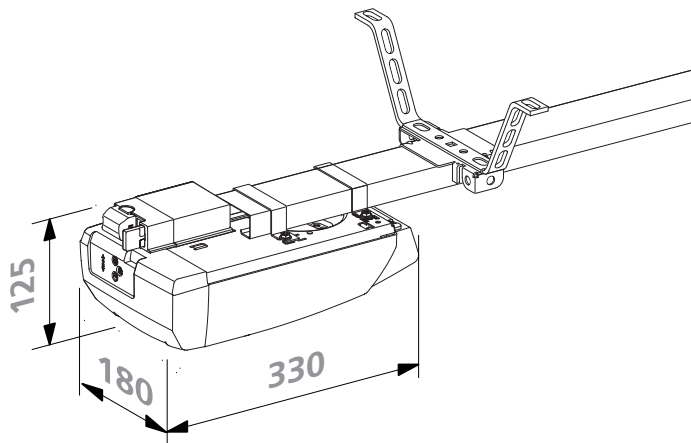

Weight (total)		
– Comfort 51	kg	5.2
– Comfort 61	kg	5.4
Sound pressure level	dB(A)	< 70

Temperature range		°C	-20
		°C	+60

#### Areas of application

#### Comfort

51      61

Up-and-over doors				
– max. door width	mm	3,500	3,500	
– max. door weight	kg	80	100	
Sectional doors with single-wall door leaf				
– max. door width	mm	5,000	5,000	
– max. door weight	kg	80	100	
Sectional doors with double-wall door leaf				
– max. door width	mm	3,000	3,000	
– max. door weight	kg	80	100	
Retractable up-and-over doors and canopy doors				
– max. door width	mm	3,500	3,500	
– max. door height	mm	2,250	2,250	
– max. door weight	kg	80	100	
Max. cycles	per day	16	16	

### 12.2 Declaration for the incorporation of a partly completed machine

(Declaration of Incorporation in line with EC Machinery Directive 2006/42/EC in accordance with Annex II, Part 1 B)

Manufacturer:

Marantec Antriebs- und Steuerungstechnik GmbH & Co. KG,  
Remser Brook 11, 33428 Marienfeld, Germany

The partly completed machine (product):

**Garage door opener Comfort 51, 61**

**Revision status: R01**

has been developed, designed and manufactured in accordance with the:

- EU Machinery Directive 2006/42/EC
- EU RoHS Directive 2011/65/EU
- EU Low Voltage Directive 2014/35/EU
- EU Electromagnetic Compatibility Directive 2014/30/EU
- Radio Equipment Directive (RED) 2014/53/EU

Applied and referenced standards and specifications:

- EN ISO 13849-1, PL "c", Cat. 2  
Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design
- EN 60335-2-95  
Household and similar electrical appliances – Safety – Part 2-95: Particular requirements for drives for vertically moving garage doors for residential use
- EN 60335-2-103  
Household and similar electrical appliances – Safety – Part 2-103: Particular requirements for drives for gates, doors and windows.
- EN 61000-6-3/2  
Electromagnetic compatibility – Emitted interference and immunity

The following requirements of EC Directive 2006/42/EC were complied with:

 
General principles, No. 1.1.2, 1.1.3, 1.1.5, 1.1.6, 1.2.1, 1.2.2, 1.2.3, 1.2.6, 1.3.1, 1.3.4, 1.3.7, 1.3.8, 1.3.9, 1.4.1, 1.4.3, 1.5.1, 1.5.4, 1.5.6, 1.5.8, 1.5.14, 1.7.

Furthermore, we declare that the special technical documentation for this partly completed machine was prepared in accordance with Annex VII Part B and we undertake to supply these documents, in electronic form, to the national authorities in response to a duly reasoned request.

This partly completed machine is intended only for installation in a door system, in order to create a complete machine pursuant to Machinery Directive 2006/42/EC. The door system may not be set in operation until it has been ascertained that the complete system complies with the requirements of the above-mentioned EC directives.

This declaration shall no longer be valid if changes are made to the product without our authorisation.

Authorised agent for the preparation of the technical documentation:  
Marantec Antriebs- und Steuerungstechnik GmbH & Co. KG,  
Remser Brook 11 · 33428 Marienfeld · Germany  
Fon +49 (5247) 705-0



Marienfeld, 1 February 2016

M. Hörmann  
Director



**Type plate**

Typ (A)	_____
Rev (B)	_____
Art. No. (C)	_____
Prod. No. (D)	_____

